


MTR

鋼管用

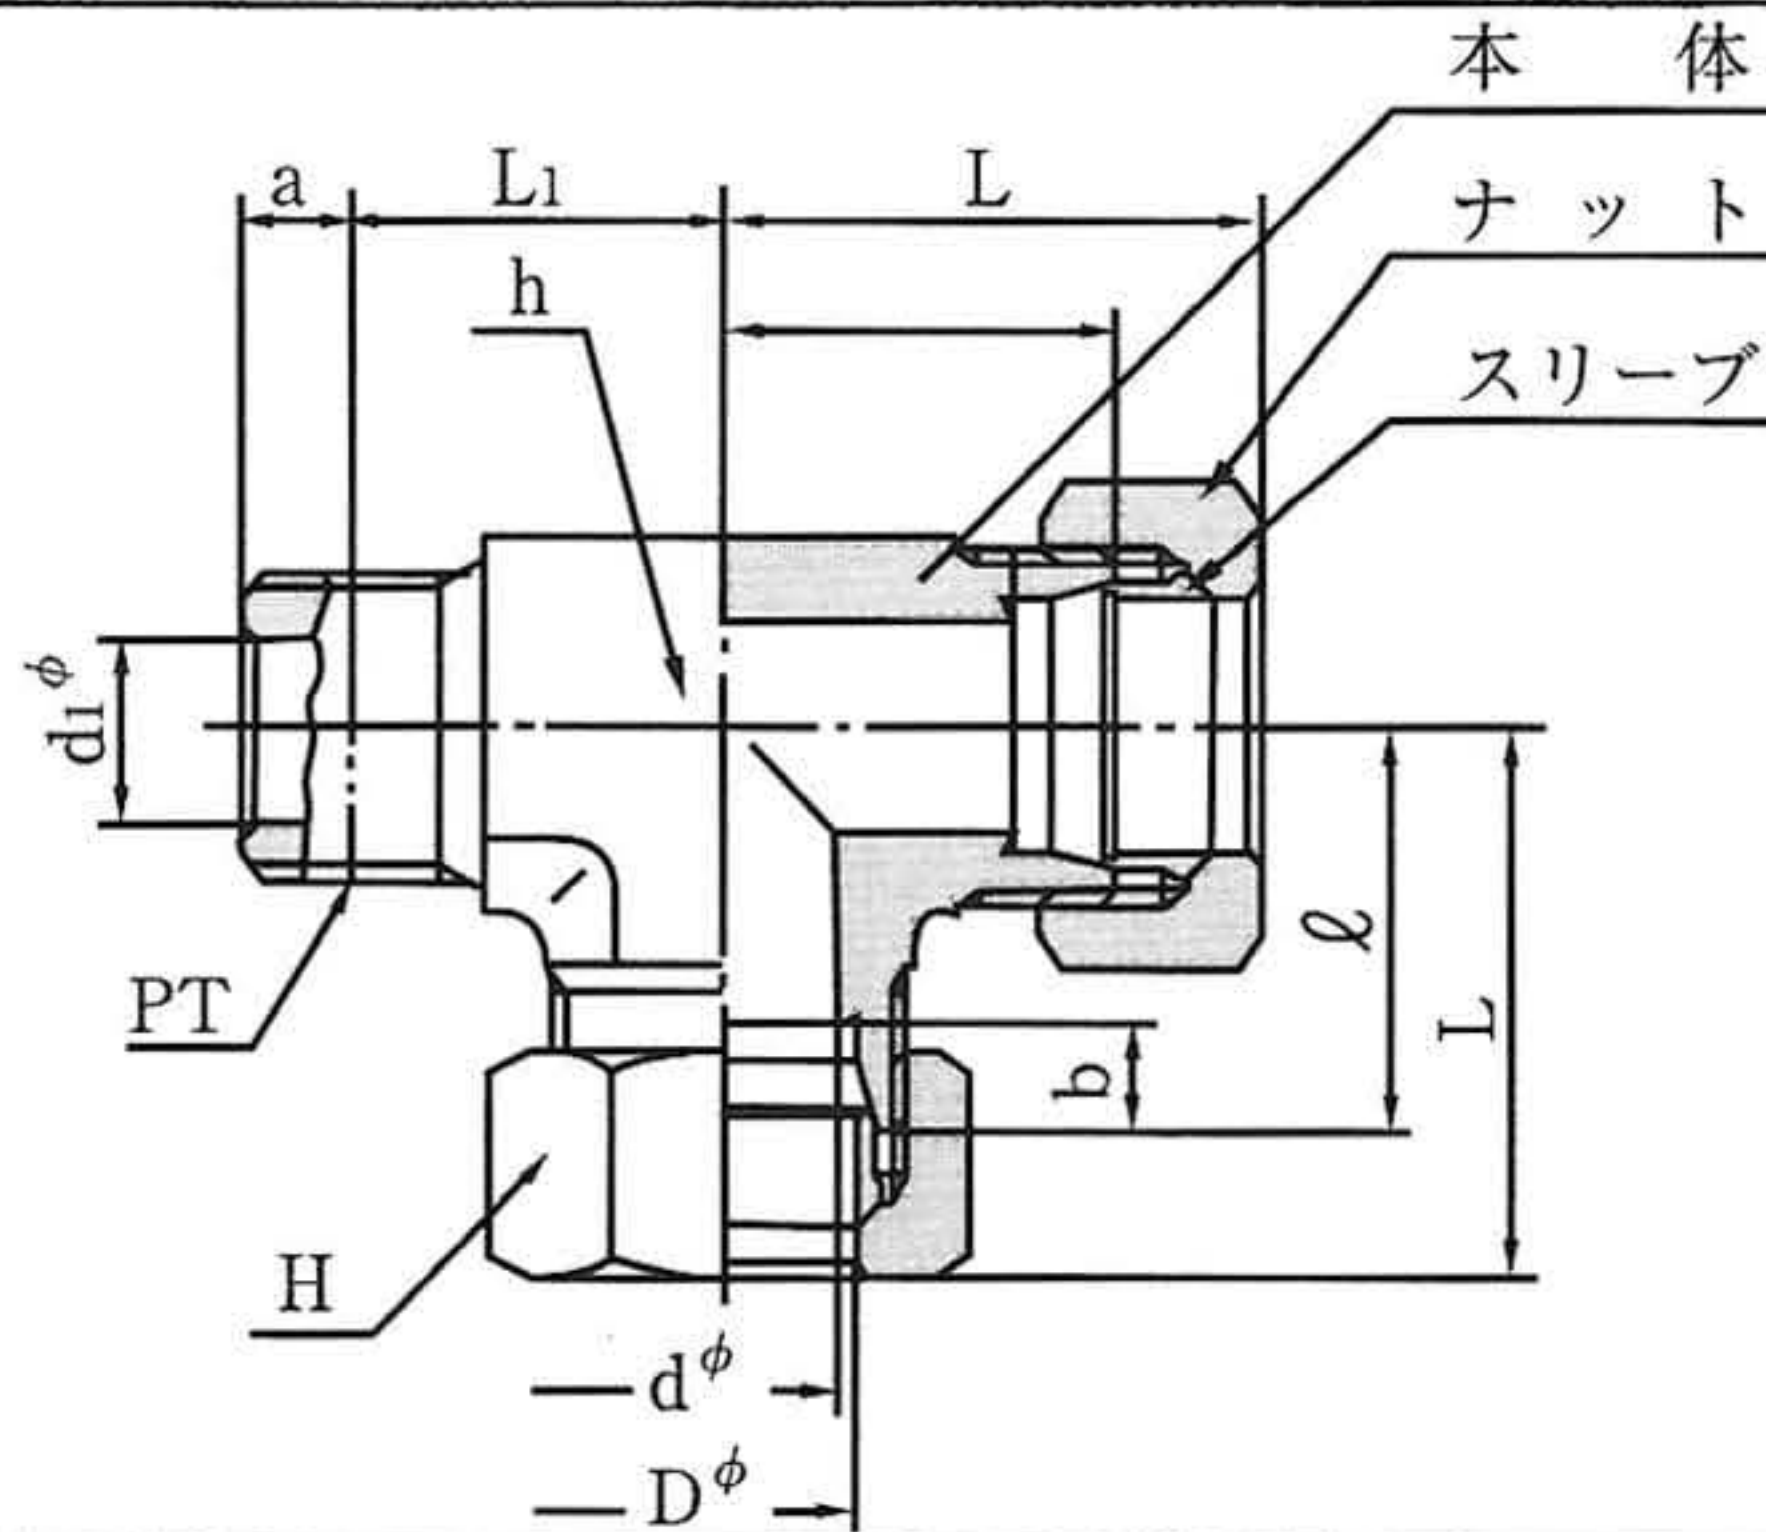

単位: mm

継手の呼び方	適用する管の外径 D		d	d ₁	基準径の位置 a	二面巾 h	六角対辺 H	b	l	(約) L	(約) L ₁	PT
	呼び径	外径										
MTR 6-PT 1/8	6	6	4	4	3.97	14	14	7	20	30.5	14	1/8
MTR 6-PT 1/4	6	6	4	7	6.01	17	14	7	23	33.5	14	1/4
MTR 8-PT 1/8	8	8	6	4	3.97	17	17	7	23	33.5	16	1/8
MTR 8-PT 1/4	8	8	6	7	6.01	17	17	7	20	33.5	18	1/4
MTR 8-PT 3/8	8	8	6	9	6.35	19	17	7	24	35.5	19.5	3/8
MTR 10-PT 1/4	10	10	8	7	6.01	17	19	7	23	34.5	19	1/4
MTR 10-PT 3/8	10	10	8	9	6.35	19	19	7	24	35.5	19.5	3/8
MTR 12-PT 1/4	12	12	10	7	6.01	19	22	7	24	35.5	18	1/4
MTR 12-PT 3/8	12	12	10	9	6.35	19	22	7	24	35.5	20.5	3/8
MTR 15-PT 3/8	15	15	12	9	6.35	24	27	7.5	29	41.5	23.5	3/8
MTR 15-PT 1/2	15	15	12	12	8.16	24	27	7.5	29	41.5	26	1/2
MTR 16-PT 1/2	16	16	13	12	8.16	27	30	7.5	32	44.5	27	1/2
MTR 18-PT 3/8	18	18	14	9	6.35	27	32	8	32	44.5	30	3/8
MTR 18-PT 1/2	18	18	14	12	8.16	27	32	8	32	44.5	30	1/2
MTR 20-PT 3/4	20	20	17	16	9.53	30	36	8	33	45.5	30.5	3/4
MTR 22-PT 3/4	22	22	18	16	9.53	32	36	9	34	46.5	32.5	3/4
MTR 25-PT 1	25	25	20	22	10.39	36	41	10	36	49.5	35.5	1
MTR 28-PT 1	28	28	22	22	10.39	41	46	10	41	55	39.5	1
MTR 30-PT 1	30	30	25	22	10.39	41	46	10	41	55.5	39.5	1
MTR 1/8-PT 1/4	1/8	10.5	8	7	6.01	17	19	7	23	34.5	19	1/4
MTR 1/4-PT 3/8	1/4	13.8	11	9	6.35	22	24	7.5	28	40	22.5	3/8
MTR 3/8-PT 1/2	3/8	17.3	14	12	8.16	27	32	8	32	44.5	30	1/2
MTR 1/2-PT 3/4	1/2	21.7	18	16	9.53	32	36	9	34	46.5	32.5	3/4
MTR 3/4-PT 1	3/4	27.2	22	22	10.39	36	41	10	36	49.5	35.5	1

(但し、素材の都合に依り多少寸法が変わることがあります。)