


鋼管用

MTF

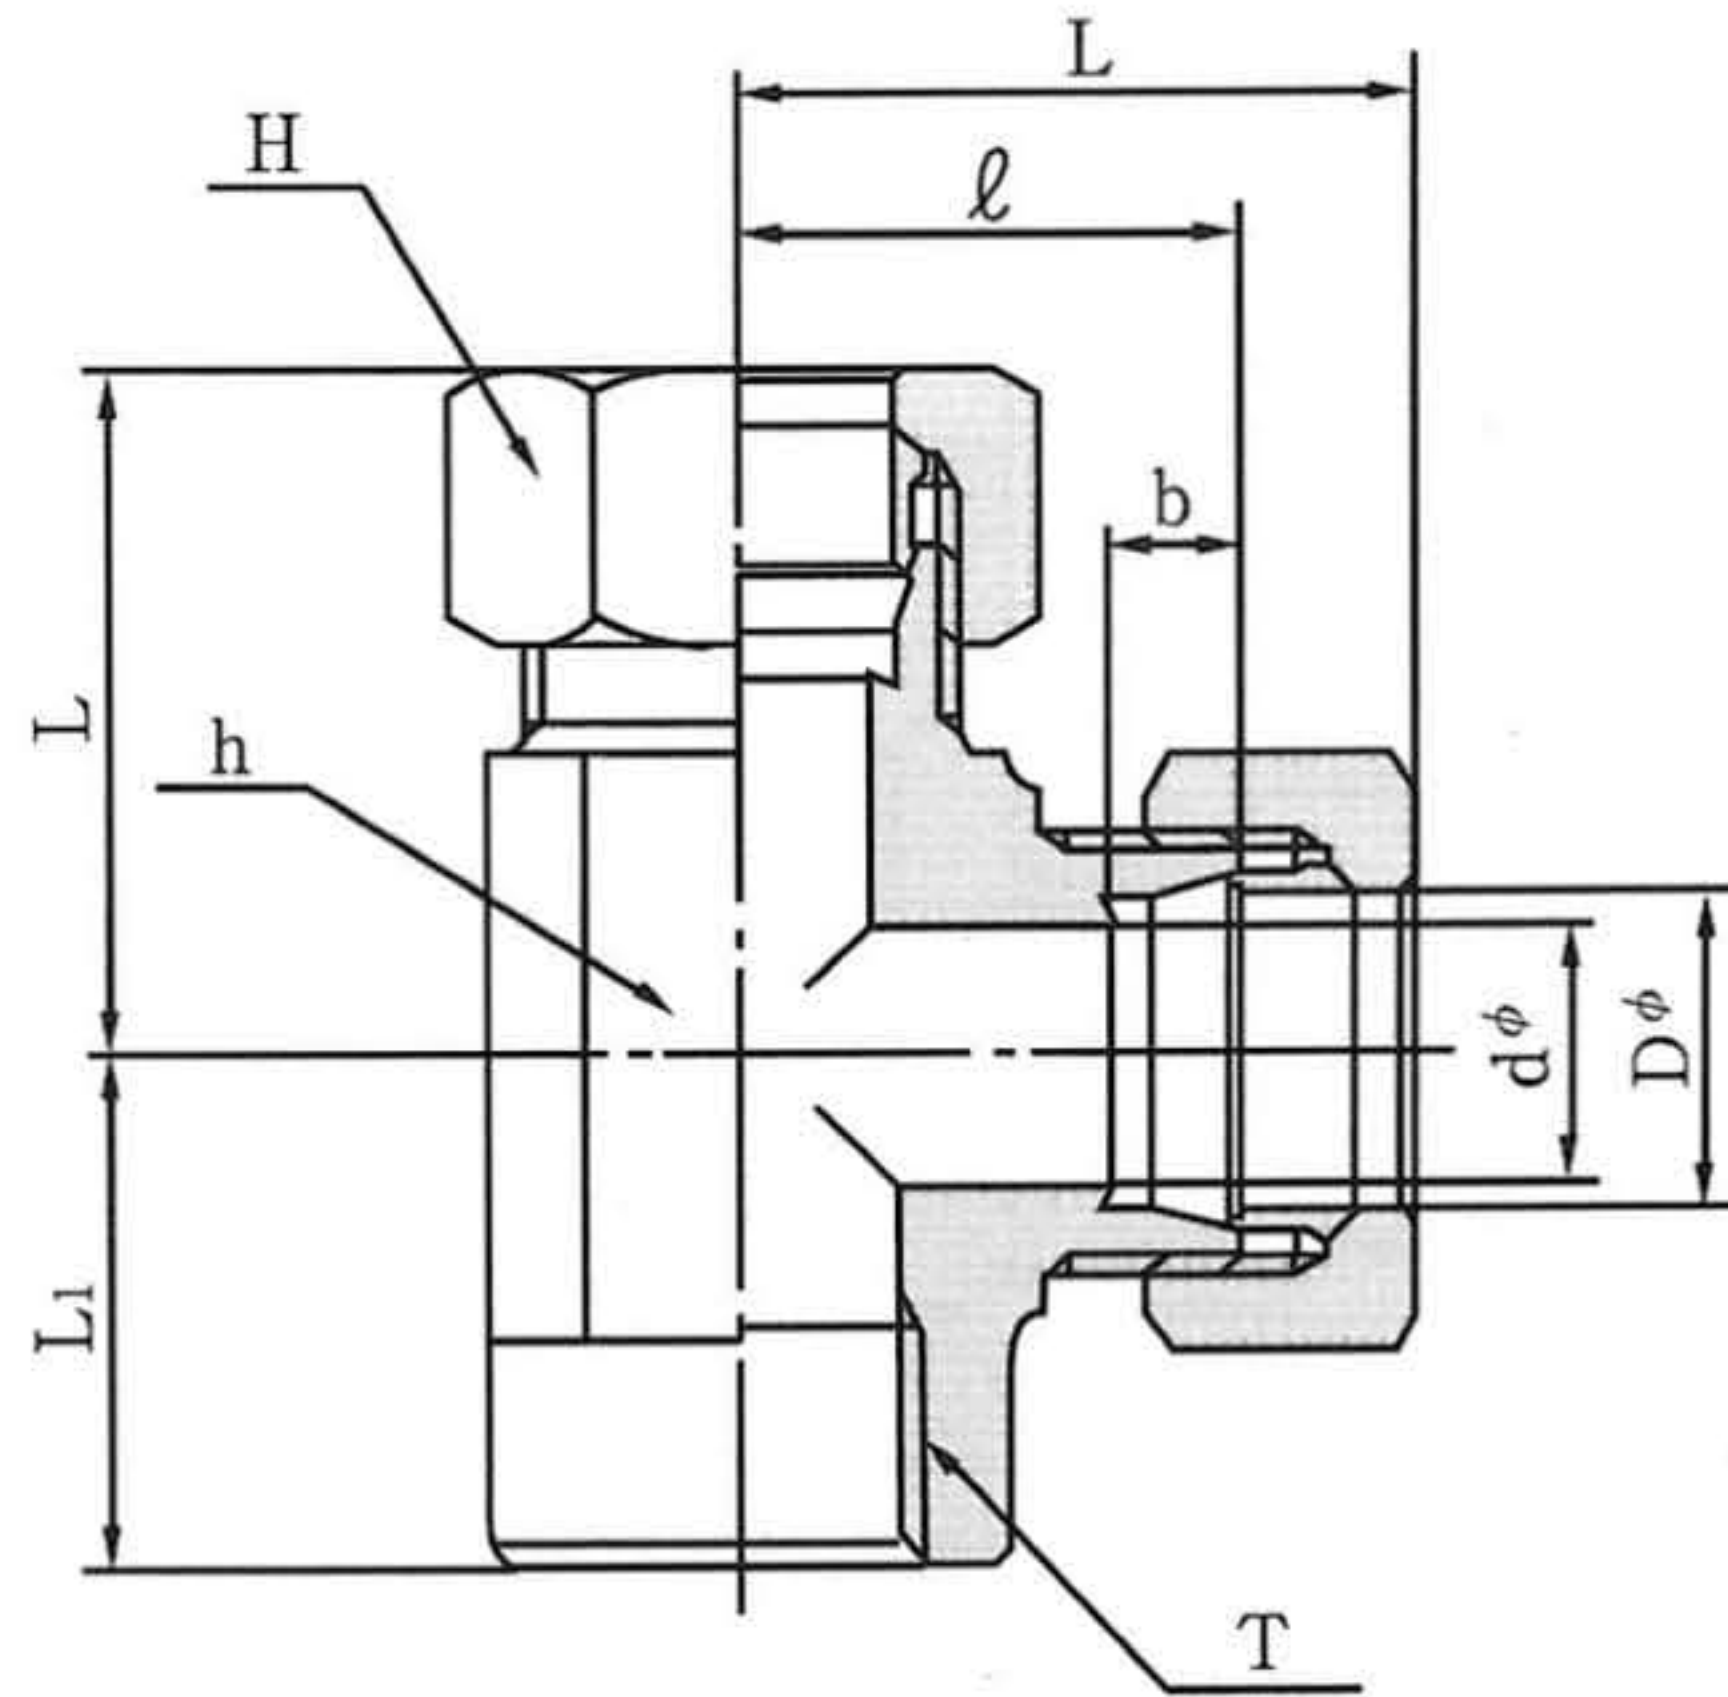

単位：mm

継手の呼び方	適用する 管の外径 D		d	二面 巾 h	六角 対辺 H	b	ℓ	(約) L	(約) L ₁	PT
	呼び	外径								
MTF 6-PT 1/8	6	6	4	14	14	7	20	20	20	1/8
MTF 8-PT 1/8	8	8	6	17	17	7	24	34.5	23	1/8
MTF 8-PT 1/4	8	8	6	14	17	7	24	34.5	24	1/4
MTF 10-PT 1/4	10	8	8	19	19	7	24	35.5	24	1/4
MTF 12-PT 1/4	12	12	10	19	22	7	24	35.5	24	1/4
MTF 12-PT 3/8	12	12	10	24	22	7	29	40.5	29	3/8
MTF 15-PT 3/8	15	15	12	24	27	7.5	29	41.5	29	3/8
MTF 15-PT 1/2	15	15	12	30	27	7.5	33	45.5	33	1/2
MTF 16-PT 1/2	16	16	19	30	30	7.5	33	45.5	33	1/2
MTF 18-PT 3/8	18	18	14	27	32	8	29	41.5	33	3/8
MTF 18-PT 1/2	18	18	14	30	32	8	33	45.5	33	1/2
MTF 20-PT 3/4	20	20	17	36	36	8	36	48.5	36	3/4
MTF 22-PT 3/4	22	22	18	36	36	9	36	48.5	36	3/4
MTF 25-PT 3/4	25	25	20	36	41	10	36	49.5	36	3/4
MTF 25-PT 1	25	25	20	46	41	10	46	59.5	46	1
MTF 28-PT 1	28	28	22	46	46	10	46	60	46	1
MTF 30-PT 1	30	30	25	46	46	10	46	60.5	46	1

(但し、素材の都合に依り多少寸法が変わることがあります。)