


鋼管用

M U

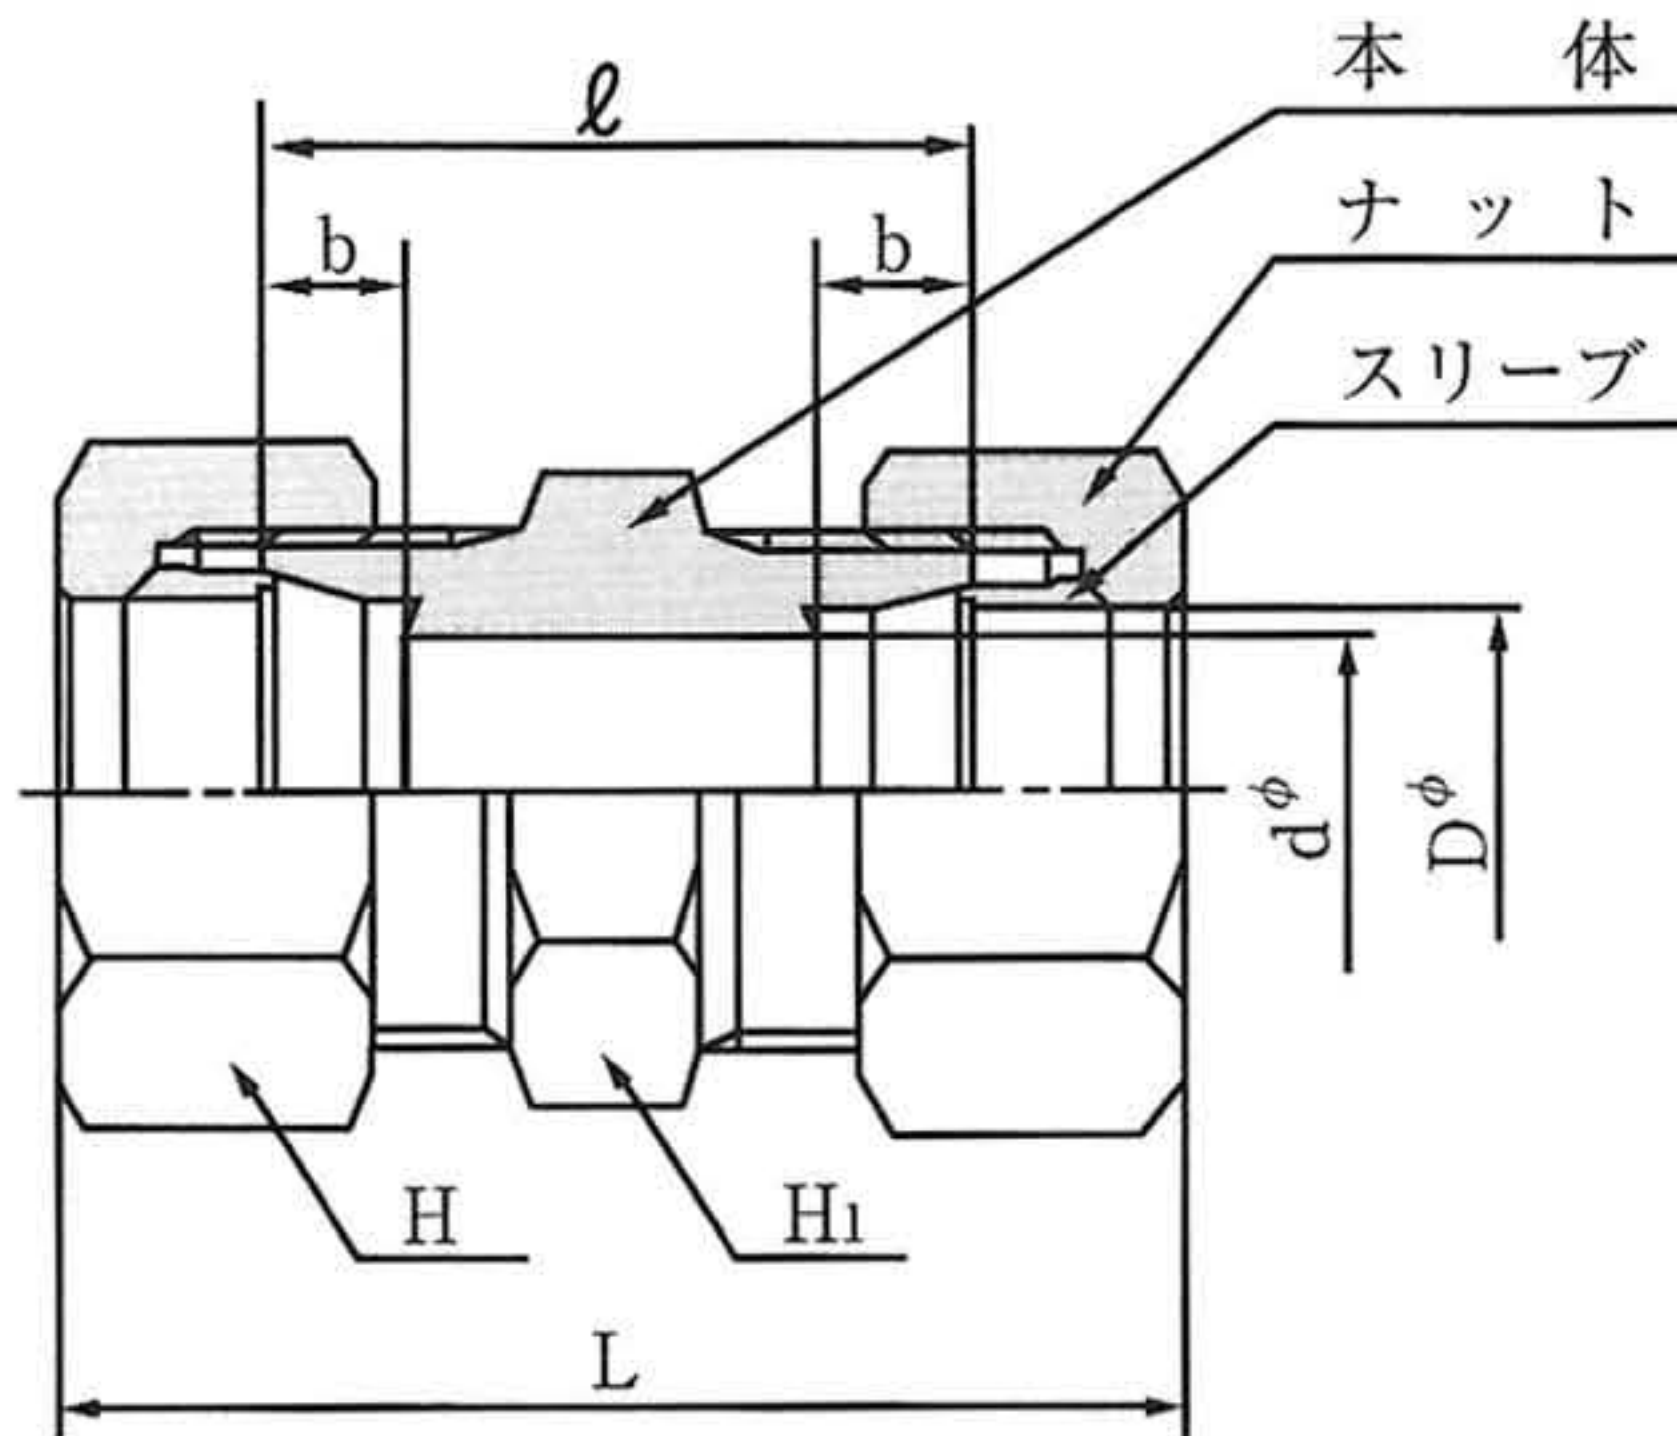

単位：mm

継手の呼び方	適用する管の外径 D		d	六角対辺		b	l	(約) L
	呼び	外径		H ₁	H			
MU 6	6	6	4	14	14	7	30	51
MU 8	8	8	6	17	17	7	31	52
MU 10	10	10	8	17	19	7	31	54
MU 12	12	12	10	19	22	7	31	54
MU 15	15	15	12	24	27	7.5	36	61
MU 16	16	16	13	27	30	7.5	36	61
MU 18	18	18	14	27	32	8	36	61
MU 20	20	20	17	30	36	8	38	63
MU 22	22	22	18	32	36	9	38	63
MU 25	25	25	20	36	41	10	39	66
MU 28	28	28	22	41	46	10	43	71
MU 30	30	30	25	41	46	10	43	72
MU 38	38	38	32	50	60	12	46	85
MU 1/8	1/8	10.5	8	17	19	7	31	54
MU 1/4	1/4	13.8	11	22	24	7.5	36	60
MU 3/8	3/8	17.3	14	27	32	8	36	61
MU 1/2	1/2	21.7	18	32	36	9	38	63
MU 3/4	3/4	27.2	22	36	41	10	39	66
MU 1	1	34	28	46	55	11	44	79

(但し、素材の都合に依り多少寸法が変わることがあります。)